


Hercules Cast Aluminium Hatch T - Bar Removal/Installation


Removal

Working from the underside of the hatch remove the Nyloc nut, washer, drive key & handwheel.

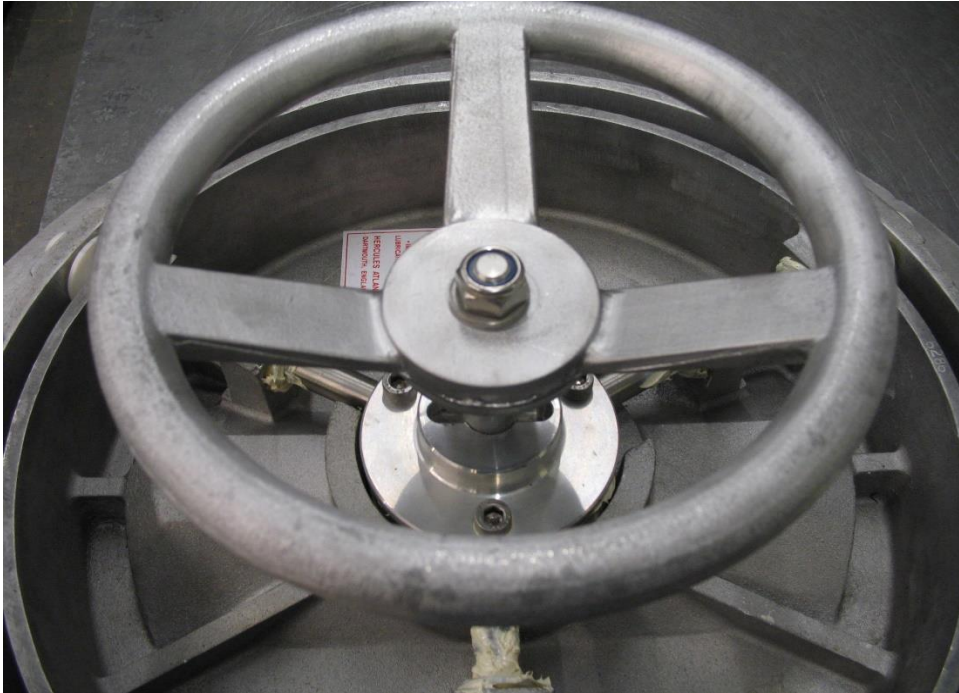

Remove the drive pin from the T - Bar shaft

NB:- The shaft **MUST** be supported on the opposite side of the driving force (eg: hammer), failure to do so can result in damage to the cover casting.

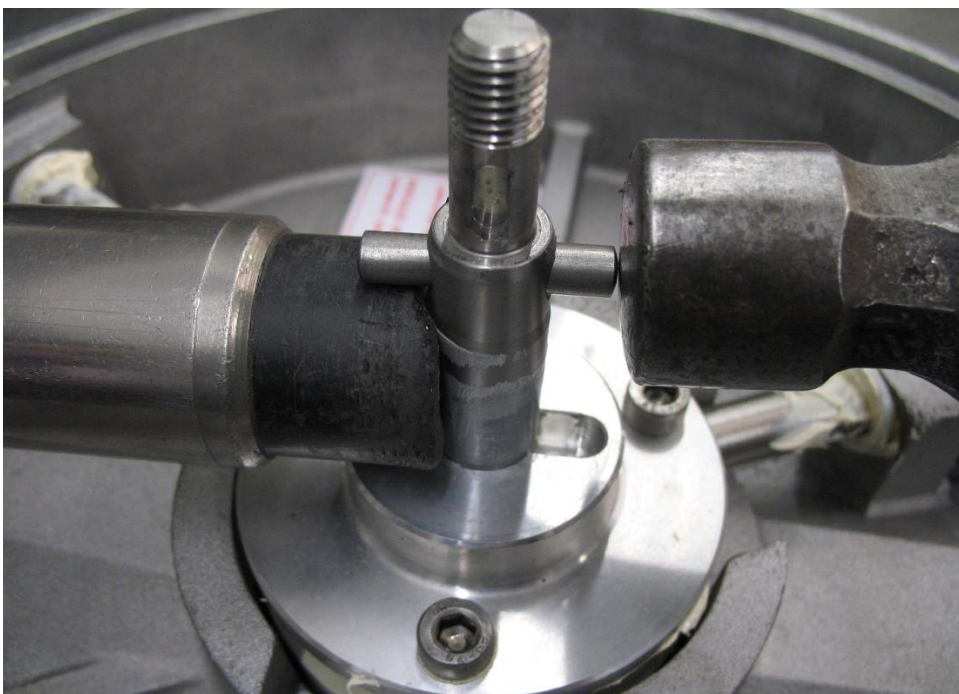

Hercules Cast Aluminium Hatch T - Bar Removal/Installation

Once the drive pin is removed, turn the hatch over to remove the T - Bar



Installation

Installation is the reverse of removal, grease the T - Bar shaft prior to installation.

NB:- When installing the drive pin the shaft **MUST** be supported on the opposite side of the driving force (eg: hammer), failure to do so can result in damage to the cover casting.